



## INSTRUCTIONS FOR (ML-DIM-R)

12-24V DC INPUT

60W DC MAX



### Installation Procedure

**Please read all instructions before installing:**

Wire input cables from power supply to + and - shown on input.

Wire output cables from DIM-R to LED strip as shown on output terminals

Please note - the dimmer will not function correctly if the polarity is not observed

Only use within recommended power and voltage specifications

For indoor use only

### REMOTE FUNCTIONS

1- ON

2- OFF

3- AUTO DOWN

4-AUTO UP

5&6 DIM UP/DOWN

Please visit our website for full warranty/disclaimer information or contact your supplier for further information